

# **Precision**

# Micro-Adjuster

Item# KMS7215


Thank you for purchasing our Precision Micro-Adjuster for use with the Kreg Precision Router Table Fence and Band Saw Fence. The Micro-Adjuster's unique design allows you to make fast and precise fence adjustments in increments of 5/1000 of an inch, with the simple turn of the Thumb Wheel.

**WARNING:** This product contains one or more chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. **Wash hands after handling.** 

#### **Attaching the Micro-Adjuster**

1


Insert the  $\frac{1}{4}$ " x 1-1/4" T-bolt (FT4212) through the hole in the bottom of the Micro-Adjuster assembly (SUB-MICRO-ADJ) so it protrudes through the top of the assembly. Place the 1/4" Brass Washer (DK1504) over the threads of the T-bolt and attach the black T-knob (DK1313) but do not tighten.

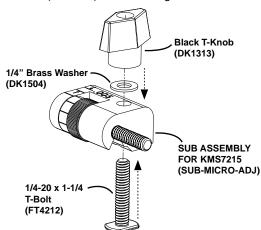

## **Attaching the Micro-Adjuster**


2

Insert the head of the  $\frac{1}{4}$ " x 1-1/4" T-bolt into the T-slot of the Fence Mounting Rail and slide the Micro-Adjuster towards the Clamp Block.

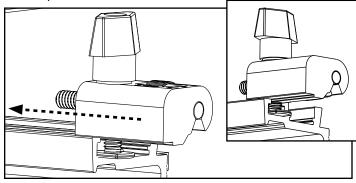

Align the threaded screw of the Micro-Adjuster with the accessory hole in the Clamp Block. Thread the Micro-Adjuster screw into the Clamp Block by rotating the Micro-Adjuster Thumb Wheel until the screw is roughly 3/4 of the way threaded into the Clamp Block.

Now you are ready to use the Precision Micro-Adjuster.

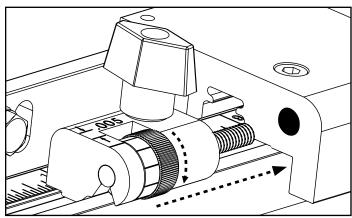

## How to Use the Micro-Adjuster

Using the Micro-Adjuster is simple. Once you have positioned your fence close to the desired position, lock down the Micro-Adjuster by tightening the black T-Knob. Rotate the Thumb Wheel on the Micro-Adjuster to make fine adjustments to the fence's position. The Micro-Adjuster's Thumb Wheel was engineered so each mark on the Thumb Wheel represents 5/1000 of an inch of movement for the fence, allowing you to set the exact fence location you want.

When using the Micro-Adjuster to adjust the position of your fence, make sure the fence is <u>NOT</u> locked in place. After you have positioned your fence exactly where you want, be sure to tighten down the Clamp Block before placing any material against the fence.

